

## 2008 Honda Civic EX

2006-08 ACCESSORIES AND EQUIPMENT Horn - Civic (Except Hybrid)

### 2006-08 ACCESSORIES AND EQUIPMENT

#### Horn - Civic (Except Hybrid)

### COMPONENT LOCATION INDEX

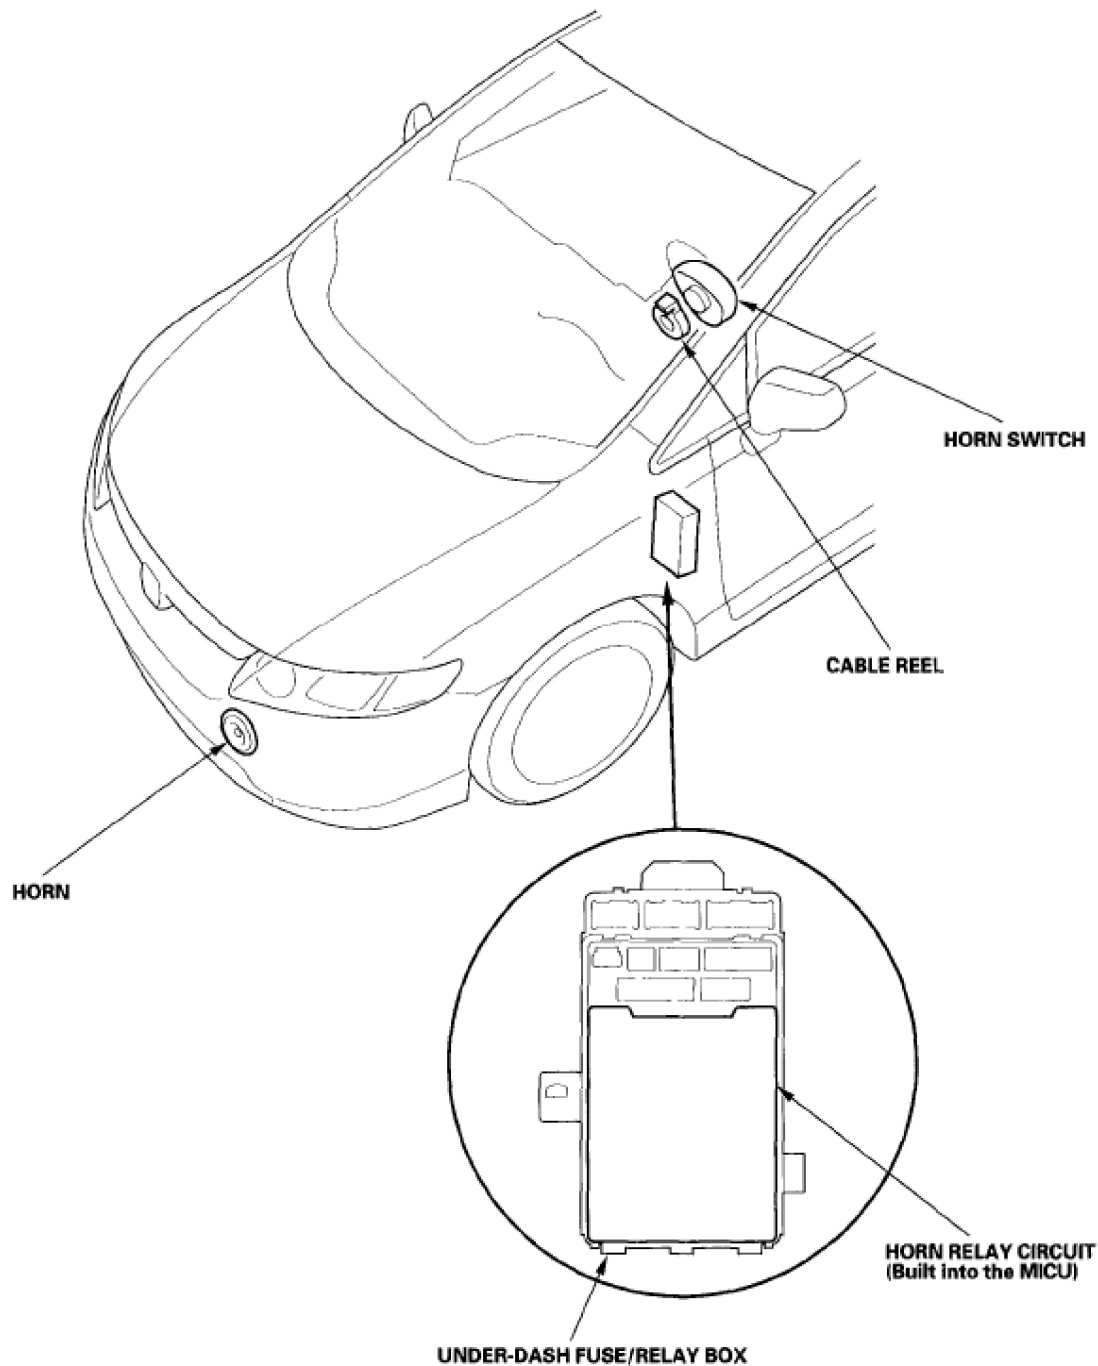


**Fig. 1: Identifying Horns Component Location**

## CIRCUIT DIAGRAM

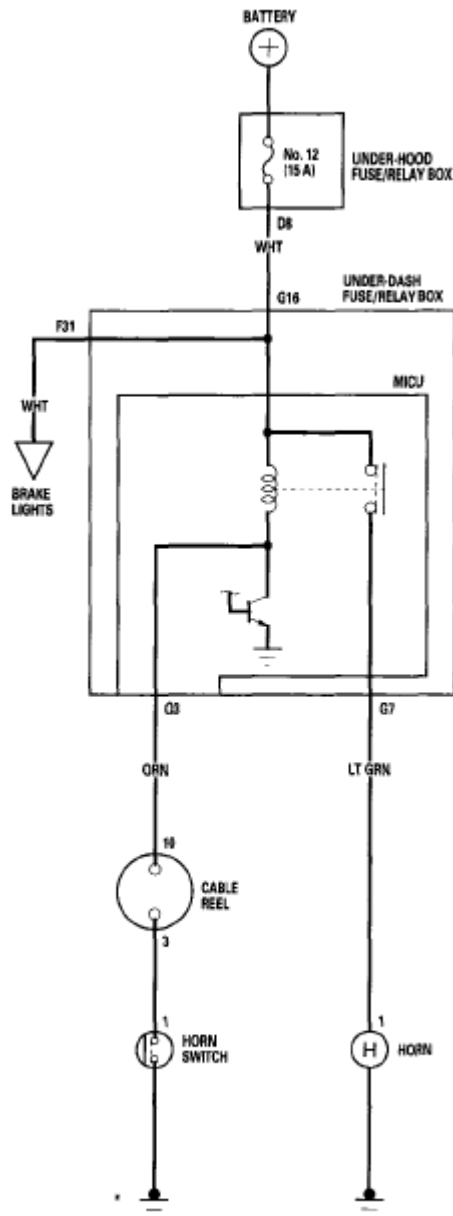


**Fig. 2: Horns - Circuit Diagram**

## HORN TEST/REPLACEMENT

1. Remove the front bumper (see **FRONT BUMPER REMOVAL/INSTALLATION** ).

2. Disconnect the 1P connector (A) from the horn (B).

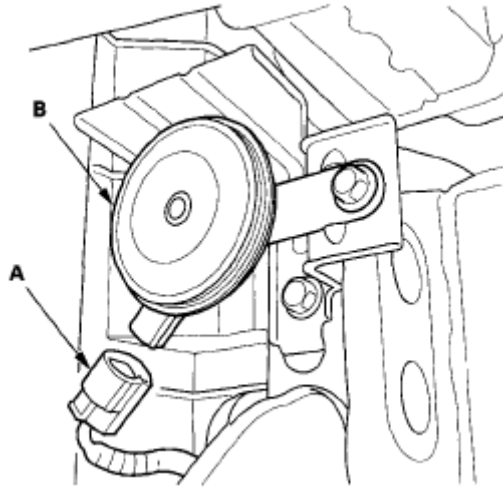


**Fig. 3: Identifying 1P Connector And Horn**

3. Test the horn by connecting battery power to the terminal (A) and grounding the bracket (B). The horn should sound.

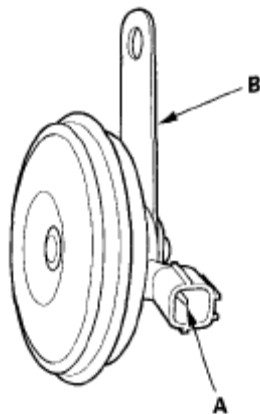


**Fig. 4: Identifying Terminal And Bracket**

4. If it fails to sound, replace it.

## **HORN SWITCH TEST**

1. Remove the steering column covers (see **STEERING COLUMN REMOVAL AND INSTALLATION** ).
2. Disconnect the cable reel 20P connector (A) from the dashboard wire harness.

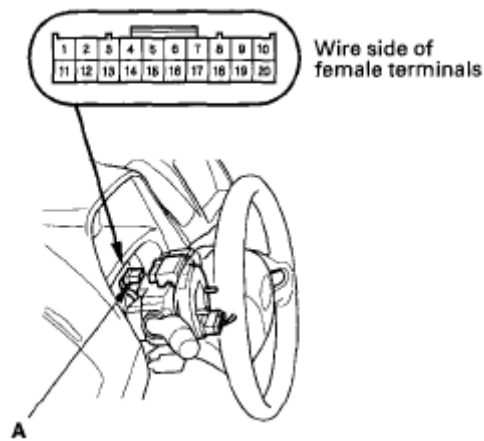


**Fig. 5: Identifying Cable Reel 20P Connector**

3. Using a jumper wire, connect the No. 10 terminal of the dashboard wire harness 20P connector to body ground. The horn should sound.
  - If the horn sounds, go to step 4.
  - If the horn does not sound, check these items:
    - No. 12 (15 A) fuse in the under-hood fuse/relay box.
    - MICU.
    - Horn.
    - An open in the wire.
4. Reconnect the cable reel 20P connector (A) to the dashboard wire harness.

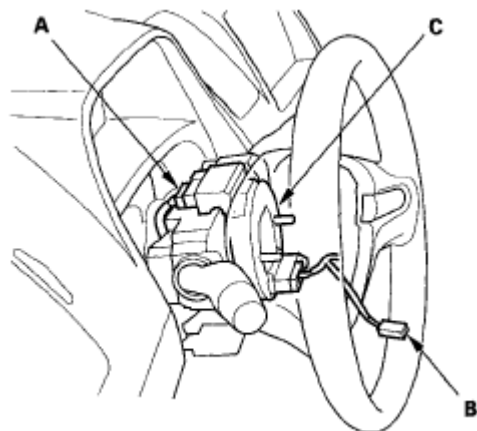


**Fig. 6: Identifying Cable Reel 20P Connector, Horn Switch 1P Positive Terminal And Cable Reel**

|                                                                |
|----------------------------------------------------------------|
| <b>2008 Honda Civic EX</b>                                     |
| 2006-08 ACCESSORIES AND EQUIPMENT Horn - Civic (Except Hybrid) |

5. Remove the driver's airbag assembly (see **DRIVER'S AIRBAG REPLACEMENT** ), and disconnect the horn switch 1P positive terminal (B) from the cable reel (C).
6. Using a jumper wire, connect the 1P connector to body ground.
  - If the horn sounds, replace the driver's airbag assembly.
  - If the horn does not sound, check these items:
    - Cable reel.
    - An open in the wire.